

# WIRING INFORMATION

## Manufacturer

Ram

## Model(s)


Ram 1500  
Ram 2500 / 3500

## Years

2009-2018  
2009-2013

## TAG Model Codes


57DR09 / 64DR09 / 80DR09

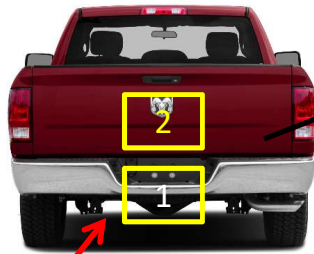

Tailgate lock



CHMSL (White /Tan shown)

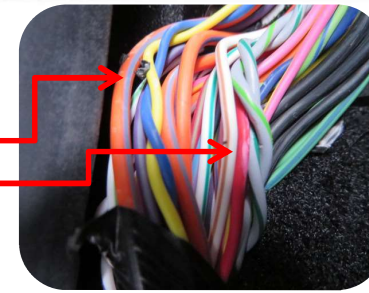

Lock (Orange/Grey or  
Tan/Green shown)

Unlock (Lime Green or  
Tan/White shown)

Keyless Wire Location

## CHMSL / Third Brake Light Wiring


Years	Wire Color(s)
2009-2018	White / Tan
3500 2014+	White

### Location

Driver side cross member, near spare tire. 2014+ 2500 Ram driver side rear top of cross member by bumper.

### Installer's Notes:

All wires should be tested prior to final hook up. On the 2014, you should go directly to the wire in which is provided from Ram for the brake light location. If you connect too many wires at once the computer will throw out problems to the brake light and dashboard. Connect the brake wire from cap to the wire provided from Ram. Turn the ignition key on. push on the brake pedal. The same process need to be done for the dome light as well. One step

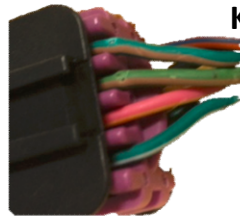

## Keyless Entry Wiring

Years	Lock Wire Color(s)	Unlock Wire Color(s)
2009-2018	Orange / Grey or Tan / Green	Lime Green / Grey or Tan / White
	Lt. Green / Tan	Green / Tan

Tailgate lock

### Location

Driver side kick panel / kick plate \* With power tailgate lock go back 6" from the connector. 1 Carefully cut back the black factory tape, open the loom and pull out the wires or 2 Open the tailgate and remove the cover plate and grab the 2nd connector.

### Installer's Notes:

All wires should be tested prior to final hook up. Test the lock wire first then the unlock wire by using computer safe tester. The 2014 Ram have low voltage going through the wires. The old tester will not work. Stander tester will not work.